




▲ No. 52-090-000 "Snap Gage" Caliper Attachment converts vernier, dial & digital electronic calipers to snap gages—a must for every caliper.

Special Features—No. 52-090-000:


- Fits standard 6" vernier, dial and digital calipers, including Fowler's 6" Pro-Max and Ultra-Cal. Attaches easily with one screw with no modification to caliper.
- Constructed of sturdy, non-magnetic aluminum.
- Easily set with a gage block.
- Can be used for inside and outside measurements.
- Can be used as a depth measuring base.
- Allows rapid checking of quantity measurements.

Special Features—No. 52-090-005, 007:

- Constructed of sturdy, non-magnetic aluminum.
- Precision ground, surface hardened.
- Maximum set stop guarantees accurate repeat measurements.
- Easily attached with one screw with no modification to caliper.
- Saves time by allowing direct reading—no additional figuring is needed.
- Spring loaded feature can be used for checking outside diameters or depth measurements.

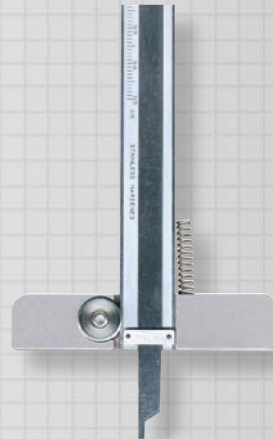

▲ Depth Base converts calipers to spring loaded measuring tools.

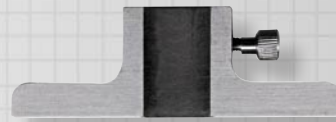

▲ Depth Base No. 52-090-002 fits most 6-8" calipers.

Special Features—No. 52-090-002 and 52-565-700:

- Precision ground, surface hardened.
- Easily attached with one screw with no modification to caliper.
- Saves time by allowing direct reading—no additional figuring is needed.

Order No.	Description
52-090-000	"Snap Gage" caliper attachment.
52-090-002	Caliper Depth Base. Fits 6" & 8" dial, vernier & digital calipers. Base: 3" long x 1/4" wide.
52-090-005	Caliper Depth Base with spring. Fits 6" dial, vernier & digital calipers. Base: 3" long x 5/8" wide.
52-090-007	Caliper Depth Base with spring. Fits 7"—12" dial, vernier and digital calipers. Base: 4" long x 5/8" wide.
52-565-700	Caliper Depth Base for 6", 8" and 12" Shockproof calipers.